

(FREELANCE YAMAHA TUNER) DUSTY MILLAR
0908 74181

YAMAHA COMBO SYNTHESIZER

Check that there are no off-sets
on Sample and Hold board.

CS-80 PARTS LIST



YAMAHA. 0908 71771
Martin Christie (ENTE)
& Bob Pattern
ALFRED (FORIET)



CONTENTS

1. Circuit Boards & Components (シート及びシート部品)	1
2. Power Supply (電源ユニット)	5
3. Key Board & Panel Component (鍵盤及びパネル)	7
4. Cabinet (外装部品)	10
5. Volume Pedal (ボリュームペダル)	12
6. Sustain Pedal (サステーンペダル)	13

1. Circuit Boards & Components (シート及びシート部品)

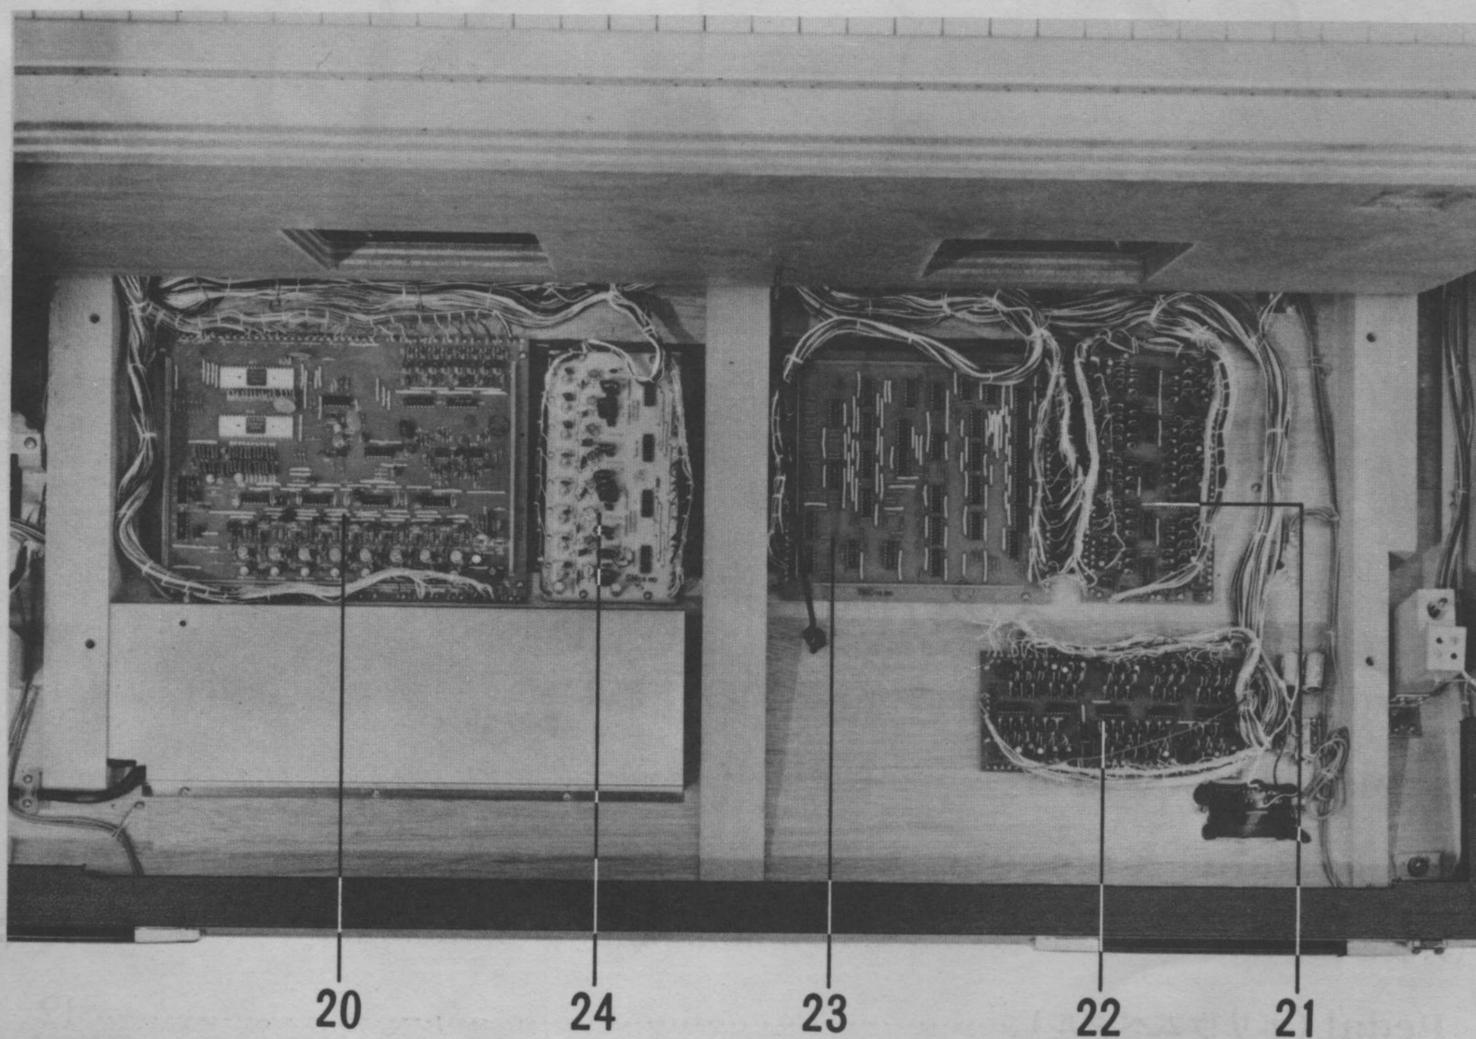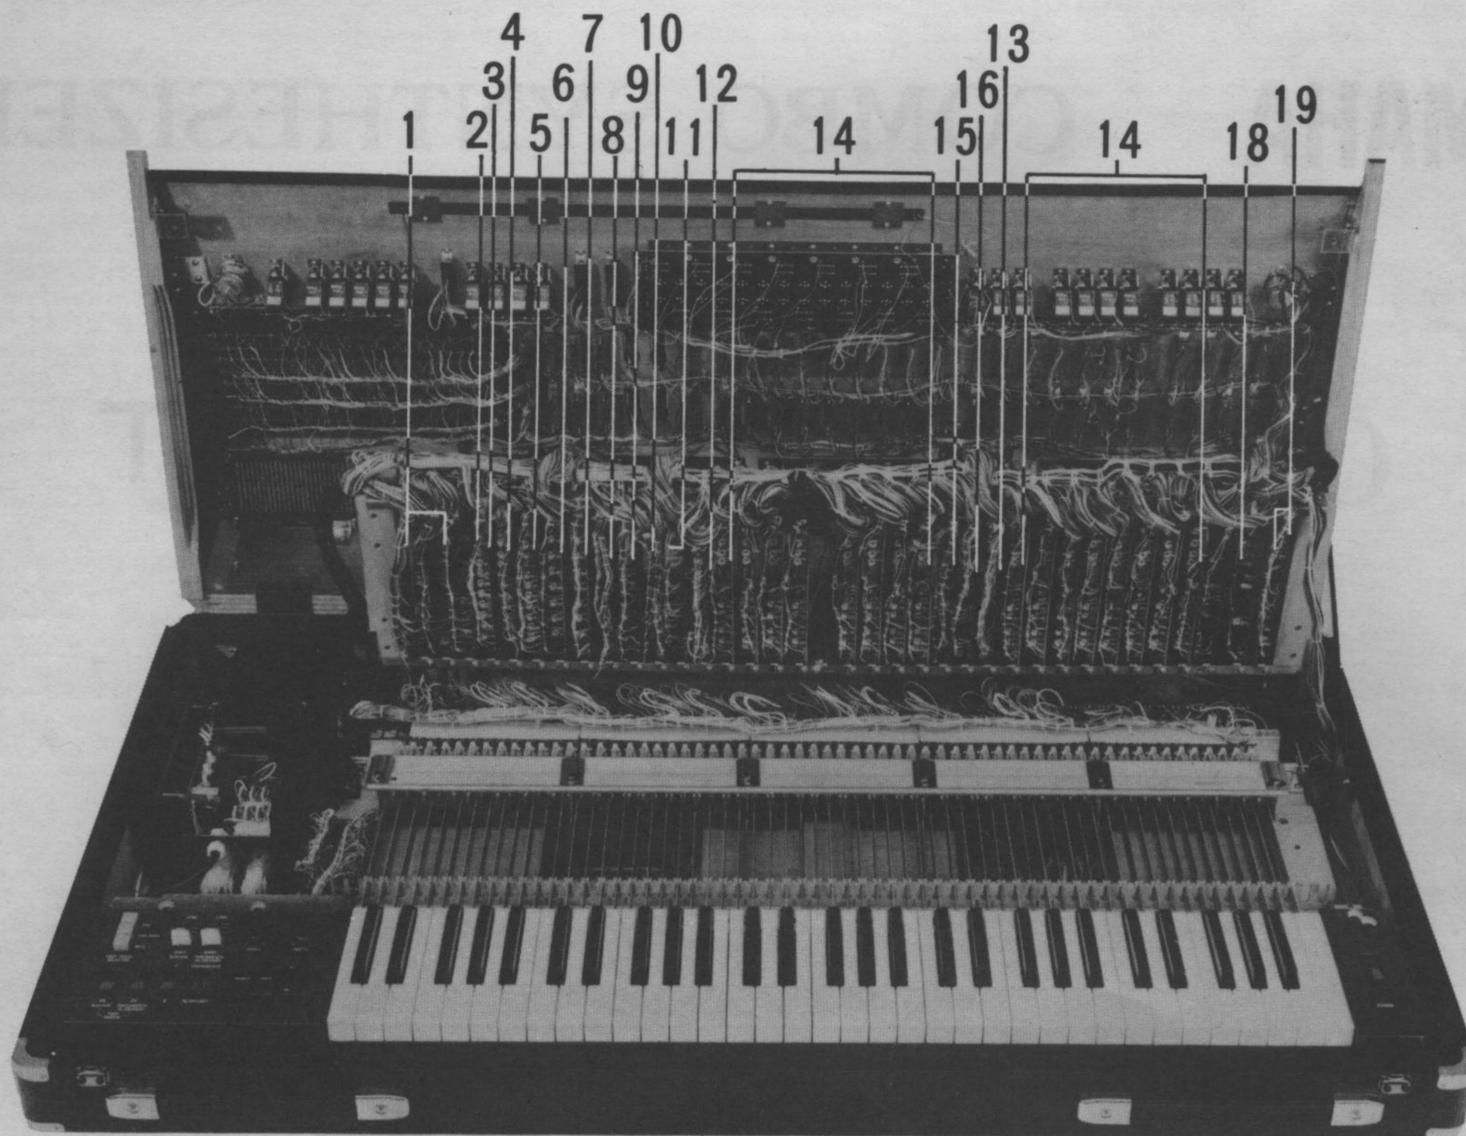

Ref. No.	Part No.	Description (部 品 名)	Remarks	Common Model
1	30 12 80 NA 03 56 20	KBC Circuit Board # 21216	K B C シ ー ト	CS-60
2	30 12 80 NA 03 56 30	TWS -do.- # 21224	T W S "	
3	30 12 80 NA 03 56 40	TRG1 -do.- # 21072	T R G 1 "	
4	30 12 80 NA 03 56 50	TRG2 -do.- # 21072	T R G 2 "	
5	30 12 80 NA 03 56 60	TRG3 -do.- # 21083	T R G 3 "	
6	30 12 80 NA 03 56 70	TRG4 -do.- # 21091	T R G 4 "	
7	30 12 80 NA 03 56 80	TRG5 -do.- # 21101	T R G 5 "	
8	30 12 80 NA 03 56 90	BA -do.- # 21064	B A "	
9	30 12 80 NA 03 57 00	SUB -do.- # 20983	S U B "	
10	30 12 80 NA 03 57 10	T51 -do.- # 22612	T 5 1 "	
11	30 12 80 NA 03 57 20	T52 -do.- # 22621	T 5 2 "	
12	30 12 80 NA 03 57 30	R51 -do.- # 21031	R 5 1 "	
13	30 12 80 NA 03 87 40	R52 -do.- # 21031	R 5 2 "	
14	30 12 80 NA 03 57 40	M -do.- # 21232	M "	
15	30 12 80 NA 03 57 50	T53 -do.- # 22612	T 5 3 "	
16	30 12 80 NA 03 57 60	T54 -do.- # 22621	T 5 4 "	
17	30 12 80 NA 03 57 70	PRA -do.- # 21043	P R A "	
18	30 12 80 NA 03 57 80	OE1 -do.- # 21244	O E 1 "	
19	30 12 80 NA 03 57 90	OE2 -do.- # 21253	O E 2 "	
20	30 12 80 NA 03 58 00	KAS -do.- # 21264	K A S "	CS-60
21	30 12 80 NA 03 58 10	TSB1 -do.- # 21192	T S B 1 "	
22	30 12 80 NA 03 58 20	TSB2 -do.- # 21201	T S B 2 "	
23	30 12 80 NA 03 58 30	TKC -do.- # 21053	T K C "	
24	30 12 80 NA 03 79 30	SH -do.- # 22544	S H "	CS-60
25	30 12 80 NA 03 79 40	SVU -do.- # 22561	S V U "	
	30 10 00 YM 26 60 00	LSI YM26600	L S I	
	30 10 00 YM 26 70 00	-do.- YM26700	"	
	40 10 00 iG 00 11 80	Integrated Circuit TC4013P	I C	
	40 10 00 iG 00 12 10	-do.- LM310	"	
	40 10 00 iG 00 13 90	-do.- NJM4558	"	
	40 10 00 iG 00 05 10	-do.- CD4006AE	"	iG00168
	40 10 00 iG 00 16 90	-do.- TC4016P	"	
	40 10 00 iG 00 17 00	-do.- TC4019P	"	
	40 10 00 iG 00 17 20	-do.- TC4069P	"	
	40 10 00 iG 00 17 30	-do.- TC4073P	"	
	40 10 00 iG 00 15 10	-do.- iG00151	"	iG00181
	40 10 00 iG 00 22 20	-do.- CA3140T	"	
	40 10 00 iG 00 10 40	-do.- TA7504	"	
	40 10 00 iG 00 10 20	-do.- HA1452	"	
	40 10 00 iG 00 15 00	-do.- iG00150	"	
	40 10 00 iG 00 15 40	-do.- iG00154	"	iG00151
	40 10 00 iG 00 15 20	-do.- iG00152	"	
	40 10 00 iG 00 15 30	-do.- iG00153	"	
	40 10 00 iG 00 15 60	-do.- iG00156	"	
	40 10 00 iG 00 15 80	-do.- iG00158	"	
	40 10 00 iG 00 15 90	-do.- iG00159	"	
	40 10 00 iG 00 16 20	-do.- μ A796HC	"	
	40 10 00 iG 00 14 10	-do.- BA617	"	
	40 10 00 iG 00 12 60	-do.- TC4049P	"	
	40 10 00 iG 00 16 50	-do.- MN3001	"	
	40 10 00 iG 00 12 40	-do.- TC4011P	"	
	40 10 00 iG 00 16 30	-do.- CA3130	"	


Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
40 10:00	iG 00:14:40	Integrated Circuit TC4071P	I C	
40 10:00	iG 00:17:70	-do.- TC4051P	"	
40 10:00	iG 00:11:90	-do.- TC4015P	"	
40 10:00	iG 00:17:60	-do.- TC4081P	"	
40 10:00	iC 04:58:30	Transistor 2SC458	トランジスター	
40 10:00	iA 04:90:20	-do.- 2SA490	"	
40 10:00	iA 05:61:70	-do.- 2SA561	"	
40 10:00	iC 08:28:30	-do.- 2SC828	"	
40 10:00	iD 02:34:30	-do.- 2SD234	"	
40 10:00	iE 00:00:10	FET 2SK30	F E T	
40 10:00	iF 00:00:40	Diode IS1555	ダイオード	
40 10:00	iF 00:03:00	-do.- IS1715P	"	
40 10:00	HU 19:51:00	Metal Film Resistor 0.1% 100Ω	金属被膜抵抗	
40 10:00	HU 19:61:00	-do.- -do.- 1KΩ	"	
40 10:00	HU 19:62:00	-do.- -do.- 2KΩ	"	
40 10:00	HU 19:71:00	-do.- -do.- 10KΩ	"	
40 10:00	HU 19:72:00	-do.- -do.- 20KΩ	"	
40 10:00	HZ 00:08:60	-do.- -do.- 29.94KΩ	"	
40 10:00	HU 19:74:00	-do.- -do.- 40KΩ	"	
40 10:00	HU 19:78:00	-do.- -do.- 80KΩ	"	
40 10:00	HU 19:81:00	-do.- -do.- 100KΩ	"	
40 10:00	HU 19:82:20	-do.- -do.- 220KΩ	"	
40 10:00	HU 57:61:00	-do.- 1% 1KΩ	"	
40 10:00	HU 57:61:50	-do.- -do.- 1.5KΩ	"	
40 10:00	HU 57:61:80	-do.- -do.- 1.8KΩ	"	
40 10:00	HU 57:62:20	-do.- -do.- 2.2KΩ	"	
40 10:00	HU 57:63:00	-do.- -do.- 3KΩ	"	
40 10:00	HU 57:66:80	-do.- -do.- 6.8KΩ	"	
40 10:00	HU 57:71:50	-do.- -do.- 15KΩ	"	
40 10:00	HU 57:72:00	-do.- -do.- 20KΩ	"	
40 10:00	HU 57:72:20	-do.- -do.- 22KΩ	"	
40 10:00	HU 57:75:60	-do.- -do.- 56KΩ	"	
40 10:00	HU 57:81:50	-do.- -do.- 150KΩ	"	
40 10:00	Hi 20:94:70	Solid Resistor 4.7MΩ	ソリッド抵抗	
40 10:00	Hi 20:95:60	-do.- 5.6MΩ	"	
40 10:00	Hi 20:99:90	-do.- 10MΩ	"	
40 10:00	HL 32:42:20	Metal Oxide Film Resistor 2W 22Ω	酸化金属被膜抵抗	
40 10:00	FF 04:31:20	Polystyrene Capacitor 1200PF	スチロールコンデンサ	
40 10:00	FD 15:31:00	-do.- 1000PF	"	
40 10:00	FP 13:53:30	Tantalum Capacitor 16V 0.33μF	タンタルコンデンサ	
40 10:00	FP 13:72:20	-do.- 16V 22μF	"	
40 10:00	FP 14:61:00	-do.- 25V 1μF	"	
40 10:00	FP 15:53:30	-do.- 35V 0.33μF	"	

(トニエ電器) Supply 2

Ref. No.	Part No.	Description (部 品 名)	Remarks	Common Model
40	10:00:FM 09:62:20	Nonpolar Capacitor 16V 2.2 μ F	N P コ ン デ ン サ	
40	10:00:FM 09:71:00	-do.- 16V 10 μ F	"	
40	10:00:FM 13:73:30	-do.- 16V 33 μ F	"	
40	10:00:FM 22:61:00	-do.- 25V 1 μ F	"	
40	10:00:FM 11:61:00	-do.- 50V 1 μ F	"	
40	10:00:FM 17:64:70	-do.- 50V 4.7 μ F	"	
40	10:00:HT 12:01:10	Semi Variable Resistor B-250 Ω	半 固 定 抵 抗 V10K 4A type	
40	10:00:HT 12:00:60	-do.- B-500 Ω	" -do.-	
40	10:00:HT 12:00:10	-do.- B-1K Ω	" -do.-	
40	10:00:HT 12:00:80	-do.- B-2K Ω	" -do.-	
40	10:00:HT 12:00:20	-do.- B-5K Ω	" -do.-	
40	10:00:HT 12:00:40	-do.- B-25K Ω	" -do.-	
40	10:00:HT 12:00:50	-do.- B-50K Ω	" -do.-	
40	10:00:HT 12:00:70	-do.- B-100K Ω	" -do.-	
40	10:00:HT 12:00:90	-do.- B-250K Ω	" -do.-	
40	10:00:HT 12:01:20	-do.- B-500K Ω	" -do.-	
40	10:00:HT 12:01:00	-do.- B-1M Ω	" -do.-	
40	10:00:HT 18:01:20	-do.- B-10K Ω	" V10K8 type	
40	10:00:HT 18:00:50	-do.- B-20K Ω	" -do.-	
40	10:00:HT 18:00:60	-do.- B-50K Ω	" -do.-	
40	10:00:HT 18:00:70	-do.- B-100K Ω	" -do.-	
40	10:00:HT 18:00:80	-do.- B-500K Ω	" -do.-	
40	10:00:HT 55:00:60	-do.- B-3K Ω	" 3006 type P	
40	10:00:HT 56:01:50	-do.- B-20 Ω	" 3321 type H	
40	10:00:HT 56:00:00	-do.- B-50 Ω	" -do.-	
40	10:00:HT 56:00:20	-do.- B-200 Ω	" -do.-	
40	10:00:HT 56:00:60	-do.- B-5K Ω	" -do.-	
40	10:00:HT 56:00:70	-do.- B-10K Ω	" -do.-	
40	10:00:HT 56:01:00	-do.- B-100K Ω	" -do.-	

2


2. Power Supply (電源ユニット)

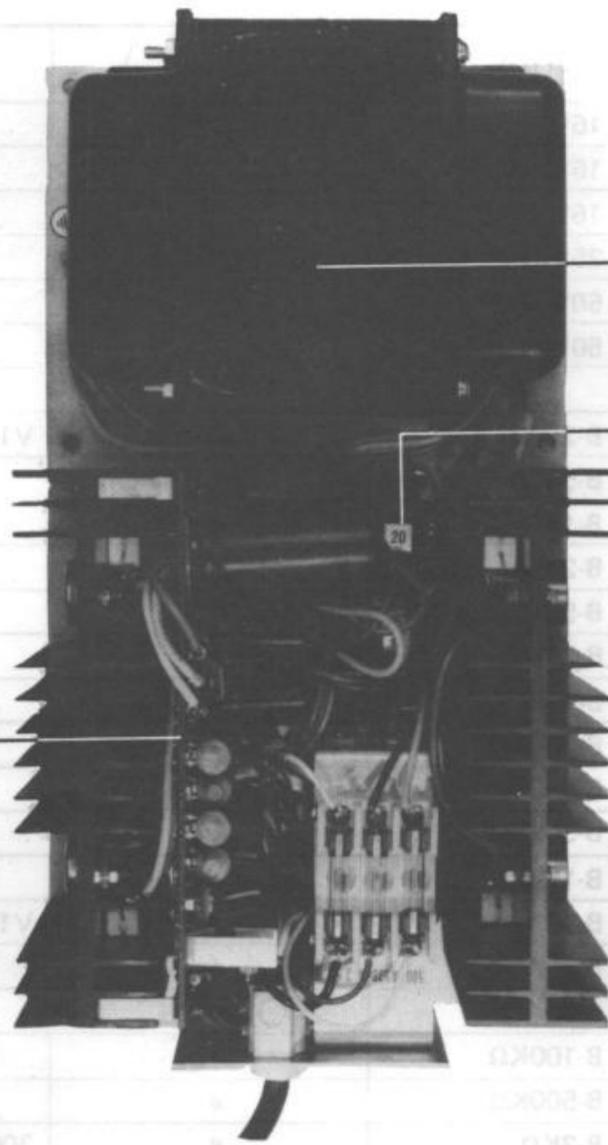

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
	30 12 00 NP 00 18 00	Power Supply Unit	電源ユニット	BS
	30 12 00 NP 00 18 10	-- do. --	"	国内
	30 12 00 NP 00 18 20	-- do. --	"	General
	30 12 00 NP 00 18 30	-- do. --	"	UL
	30 12 00 NP 00 18 40	-- do. --	"	South African
	30 12 00 NP 00 18 50	-- do. --	"	Australian
	30 12 00 NP 00 18 60	-- do. --	"	European
	30 12 00 NP 00 18 70	-- do. --	"	North European
	30 12 00 NP 00 18 80	-- do. --	"	CSA
1	30 12 00 NA 03 79 40	SUV Circuit Board #22562	S V U シ ー ト	
	40 10 00 iA 05 61 70	Transistor 2SA561	ト ラ ン ジ ス タ ー	
	40 10 00 iA 04 90 20	-- do. -- 2SA490	"	
	40 10 00 iC 08 28 80	-- do. -- 2SC828	"	
	40 10 00 iC 04 58 80	-- do. -- 2SC458	"	
	40 10 00 iD 02 34 10	-- do. -- 2SD234	"	
	40 10 00 iF 00 00 40	Diode 1S1555	ダ イ オ ー ド	
	40 10 00 iH 00 01 40	-- do. -- 10DC-4	"	
	40 10 00 iH 00 01 50	-- do. -- 10DC-4R	"	
	40 10 00 iH 00 05 90	-- do. -- 10E-1	"	
	40 10 00 iF 00 01 00	Zener Diode 1S1715	ツ ェ ナ ー ダ イ オ ー ド	
	40 10 00 iF 00 07 80	-- do. -- WZ150	"	
	40 10 00 iF 00 08 60	-- do. -- WZ056	"	
	40 10 00 iF 00 04 20	-- do. -- 02Z5.6A	"	
	40 10 00 iG 00 13 90	Integrated Circuit RC4558	I C	

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
	40:10:00:HL 31:24:70	Metal Oxide Resistor 1P0.47 Ω	酸金抵抗	
	40:10:00:HW 20:34:00	Fuse Resistor 300mA 4 Ω	ヒューズ抵抗	
	40:10:00:HT 41:00:10	Solid Variable Resistor B-220 Ω	ソリッドボリューム	
	40:10:00:HT 41:02:30	- do. - B-1k Ω	"	
	40:10:00:HT 41:02:40	- do. -	"	
	40:10:00:FQ 02:24:70	Oil Capacitor 630V 0.047 μ F	オイルコンデンサ	
	40:10:00:FZ 00:01:10	Spark Killer 125V 0.033 μ + 120 Ω	C R 複合部品	
2	40:10:00:GA 02:89:10	Powertransformer	電源トランス	
	40:10:00:HM 55:31:00	Cement Molded Resistor 5P 1 Ω	セメント抵抗	
	40:10:00:iA 04:90:10	Transistor 23A490	トランジスター	
	40:10:00:iA 07:46:00	- do. - 2SA746	"	
	40:10:00:iD 05:56:00	- do. - 2SD556	"	
	40:10:00:iD 02:34:10	- do. - 2SD234	"	
3	40:10:00:iH 00:01:70	Diode 6B20	ダイオード (単相ブリッジ)	
	40:10:00:KB 00:04:30	Fuse 2.5AT	ヒューズ	国内
	40:10:00:KB 00:03:30	- do. - 1AT	"	Australian
	40:10:00:KB 00:03:10	- do. - 500mAT	"	国内, General South African, Aust.
	40:10:00:KB 00:07:10	- do. - miniature type 500mAT	ミニチュアヒューズ	European, BS, North European
	40:10:00:KB 00:06:80	- do. - - do. - 1.25AT	"	BS
	40:10:00:KB 00:11:50	- do. - Approved by UL 500mAT	UL ヒューズ	UL
	40:10:00:KB 00:14:50	- do. - - do. - 2.5AT	"	UL
	40:10:00:LB 20:12:20	Fuse Holder Block Type	ヒューズホルダー	国内, General, UL, South Africa, Australia
	40:10:00:LB 20:10:90	- do. -	"	BS, European, North European
	40:10:00:LB 60:15:30	Connector 6pin	コネクタ - 6P	
	40:10:00:LB 60:15:40	- do. - 9pin	"	
	40:10:00:FJ 24:91:00	Capacitor 25V 1000 μ F	電解コンデンサ	
	40:10:00:FM 38:95:60	- do. - 40V 5600 μ F	"	

3. Key Board & Panel Component (鍵盤及びパネル)

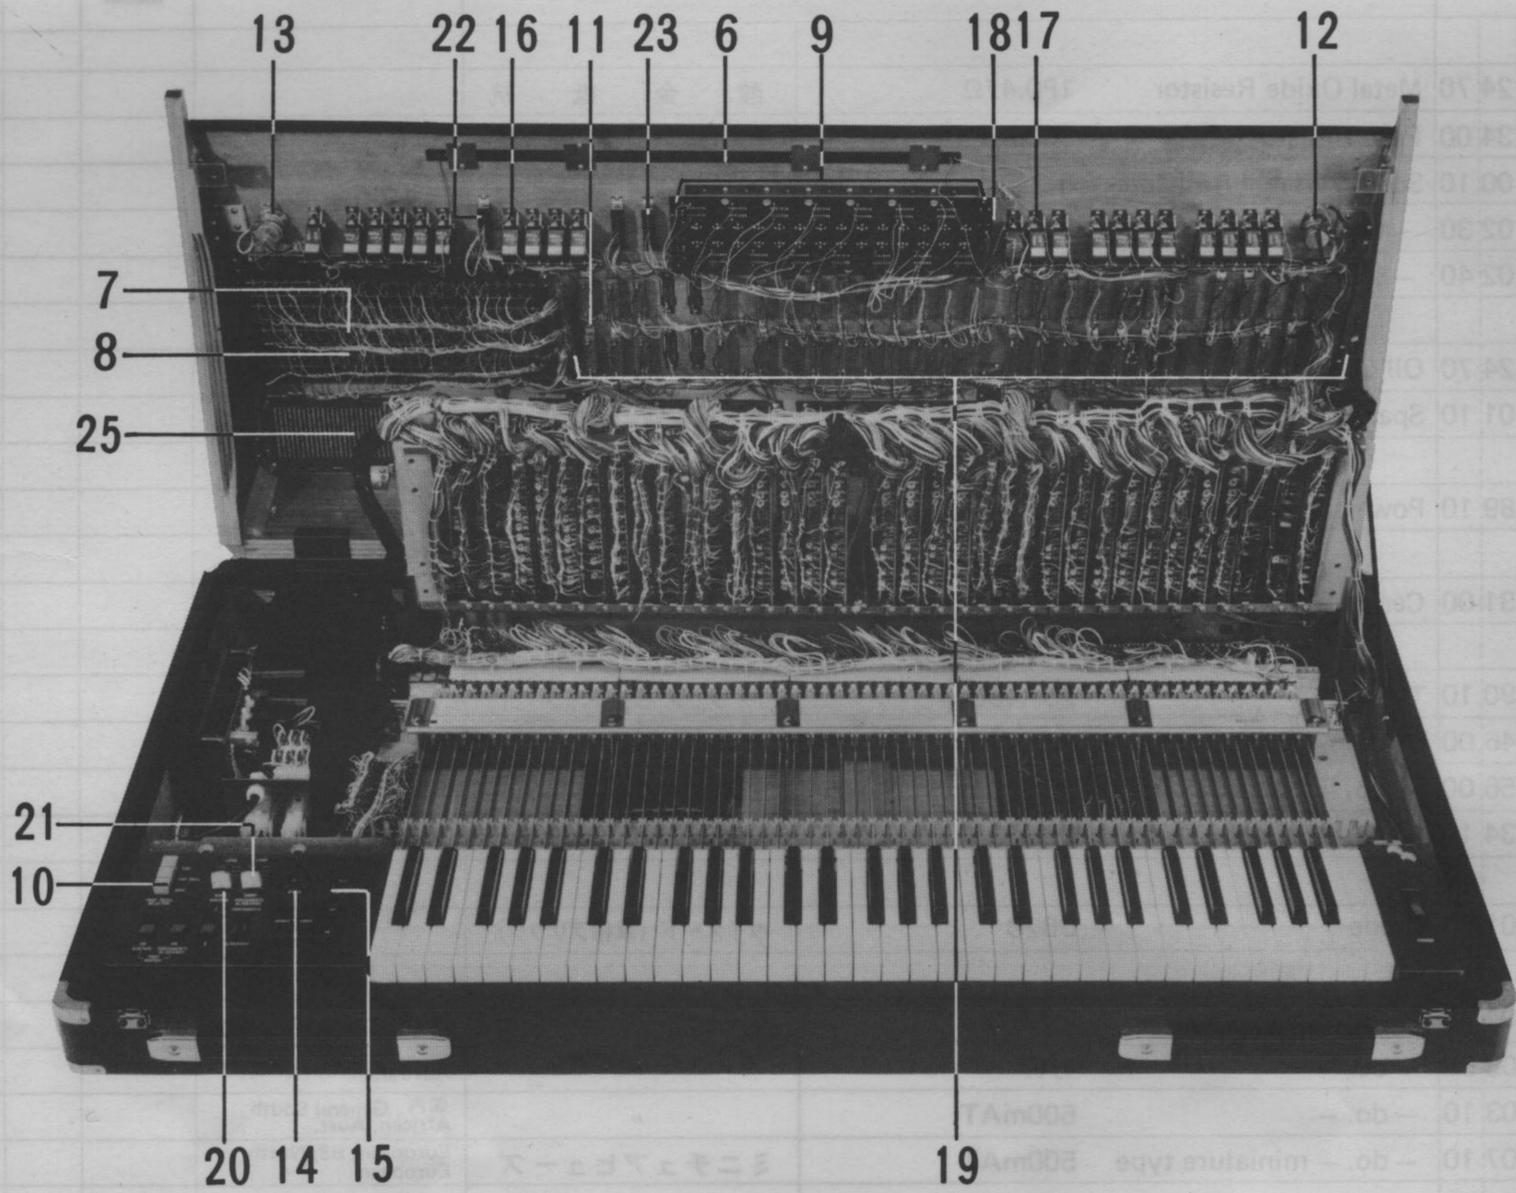


Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
1	30:12:80:NB:04:77:00	Keyboard Assembly	鍵盤 Ass'y	
2	30:12:80:NB:04:77:20	Switch Assembly Key Switch 2, 3, 4, 5u	スイッチ Ass'y	12 Keys
3	30:12:80:NB:04:77:30	-do.- 1u	"	13 Keys
	30:11:80:NB:04:34:30	White Key Assembly C, F	白 鍵 Ass'y	P301 P302
	30:11:80:NB:04:34:40	-do.- D	"	-do.-
	30:11:80:NB:04:34:50	-do.- E, B	"	-do.-
	30:11:80:NB:04:34:60	-do.- G	"	-do.-
	30:11:80:NB:04:34:70	-do.- A	"	-do.-
	30:12:80:NB:04:34:80	-do.- C#	"	-do.-
	30:12:80:NB:04:77:10	Black Key Assembly	黒 鍵 Ass'y	
4	30:10:00:CB:02:78:40	Support	サポ-ト	P301 P302
5	30:10:00:CB:02:84:10	Pibot Rubber	ピボットゴム	-do.-
6	30:10:00:NB:01:79:70	Slide Controller Assembly	スライドコントローラー Ass'y	CS-60, YC-45D, E-5
	30:10:00:CB:02:86:00	Slide Knob White	スライドツマミ 白	CS-60,50
	30:10:00:CB:02:86:10	-do.- Black	" 黒	-do.-
	30:10:00:CB:02:86:20	-do.- Red	" 赤	-do.-
	30:10:00:CB:02:86:30	-do.- Green	" 緑	-do.-
	30:10:00:CB:02:86:40	-do.- Yellow	" 黄	-do.-
	30:10:00:CB:02:86:50	-do.- Gray	" 灰	-do.-
	30:10:00:CB:02:86:60	Knob Black	ツマミ 黒	for VOLUME -do.-
	30:10:00:CB:02:86:70	TVR Knob White	" 白	-do.-
	30:10:00:CB:02:86:80	-do.- Black	" 黒	-do.-
	30:10:00:CB:02:86:90	-do.- Red	" 赤	-do.-
	30:10:00:CB:02:87:00	-do.- Green	" 緑	-do.-
	30:10:00:CB:02:87:10	-do.- Gray	" 灰	-do.-
	30:10:00:CB:03:01:20	Knob Black (out side)	" (外側)	for PITCH -do.-
	30:10:00:CB:03:01:30	-do.- (in side)	" (内側)	-do.- -do.-
	30:10:00:CB:00:49:50	-do.- Black	" 黒	
7	40:10:00:KA:40:04:80	Slide Switch TPS-2P Black	" 黒	for Memory Bank CS-60
8	40:10:00:HP:50:01:50	Slide Variable Resistor TPR B-10K Black	スライドVR 黒	-do.- -do.-
	40:10:00:HP:50:01:60	-do.- Gray	" 灰	-do.- -do.-
	40:10:00:HP:50:01:70	-do.- White	" 白	-do.- -do.-
	40:10:00:HP:50:01:80	-do.- Green	" 緑	-do.- -do.-
	40:10:00:HP:50:01:90	-do.- Red	" 赤	-do.- -do.-
	40:10:00:HP:50:02:00	-do.- Yellow	" 黄	-do.- -do.-
9	40:10:00:KA:90:06:00	Push Switch 28 channels	プッシュSW	for TONE SELECTOR
10	40:10:00:KA:70:11:60	-do.-	"	for FOOT PEDAL SELECTOR
11	40:10:00:KA:10:00:90	See Saw Switch	シーソーSW	CS-60,50
12	40:10:00:HR:20:00:30	Variable Resistor A-10K Ω x 2	ポリウ-ム	for VOLUME
13	40:10:00:HR:60:00:20	-do.- B-10K Ω +B-500 Ω (Center Click Type)	"	for PITCH CS-60,50
14	40:10:00:HR:20:01:00	-do.- B-10K Ω	"	for SPEED
15	40:10:00:HR:20:01:20	-do.- B-500K Ω x 2	"	for DEPTH

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
16	40:10:00:HP:70:00:10	Tone Variable Resistor B-10KΩ トーンポリウム		CS-60,50
17	40:10:00:HP:70:00:20	-do.- B-10KΩ (Center Click Type) //	for BRILLIANCE	-do.-
18	40:10:00:HP:70:01:30	-do.- B-10KΩ x 2 (Center Click Type) //	for MIX	
19	40:10:00:HQ:30:00:10	Slide Variable Resistor B-10KΩ スライドポリウム		CS-60,50
20	40:10:00:HQ:30:01:70	-do.- C-10KΩ //	for SUSTAIN	CS-60
21	40:10:00:HQ:30:01:50	-do.- B-10KΩ //	for PORTAMENTO or GLISSAND	-do.-
22	40:10:00:KA:40:02:90	Slide Switch SL-124-2 Black スライドスイッチ黒	for FUNCTION	-do.-
23	40:10:00:KA:40:05:40	-do.- White //	for FEET	
	30:10:00:AA:03:75:60	Back Panel バックパネル	Japan, US, American Canadian, BS	
	30:10:00:AA:03:75:70	-do.- //	S. African, General	
	30:10:00:AA:03:75:80	-do.- //	N. European, European	
	40:10:00:LB:20:04:50	Holder for Fuse LB0086 ヒューズホルダー	-do.-	
	40:10:00:LB:20:04:80	-do.- SN2052 Screw Type //	General, S. African	CS-60,50
	30:10:00:CB:01:91:30	Knob ツマミ	for EXTERNAL LEVEL	CS-60,50 A-60
	40:10:00:HR:20:01:90	Variable Resistor A-50KΩ ポリウム	-do.-	CS-60,50
	40:10:00:LB:20:02:50	Voltage Selector 電圧切換器	General, S. African, N. European, European	-do.-
	40:10:00:KA:40:04:90	Slide Switch SSB042 12L Lead スライドスイッチ	for HIGH LOW	
	40:10:00:LB:20:06:30	Phone Jack ヘッドフォンジャック	for FOOT SWITCH, OUT PUT, EXTERNAL IN	CS-60,50
	40:10:00:LB:40:01:00	-do.- LJ-070 //	for FOOT CONTROLLER	-do.-
24	40:10:00:KA:10:00:70	Power Switch SLN106AS1 パワースイッチ	Others	CS-60,50
	40:10:00:KA:10:03:40	-do.- //	BS, N. European, European	-do.-
	30:12:00:NB:04:53:30	Neon Lamp Assembly ネオン管 Ass'y	BS, N. European, European	
25	30:10:00:AA:04:04:20	Grill for Radiator 放熱グリル		


KA 400290 (new part number)

4. Cabinet (外装部品)

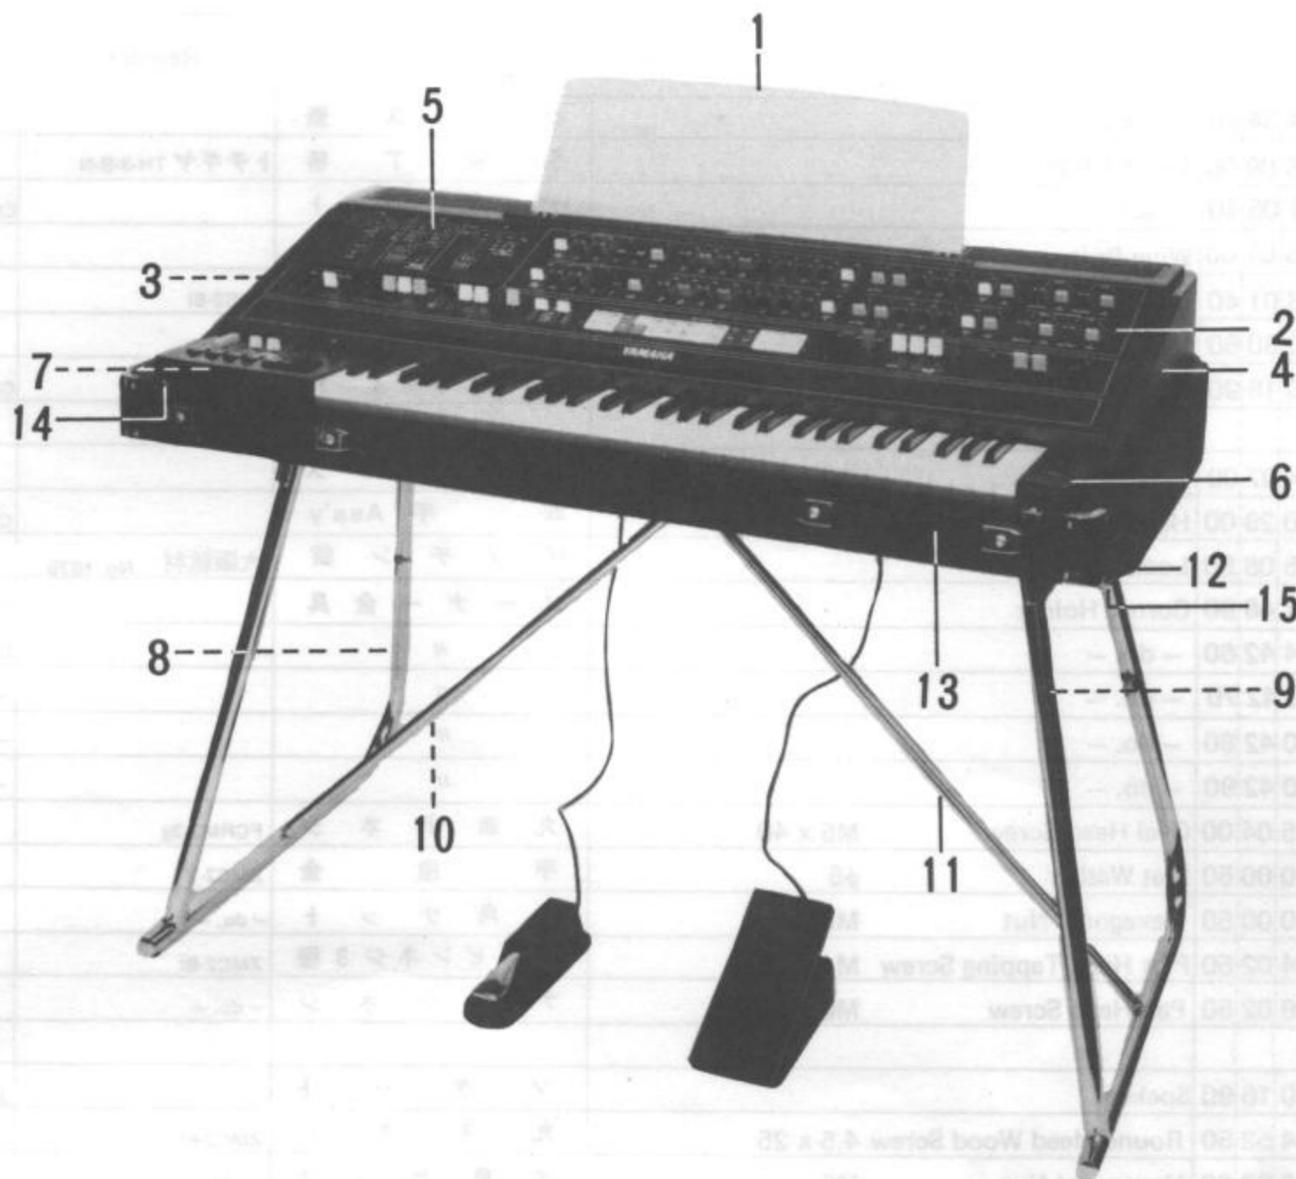

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
1	30:10:00:CB 02:47:00	Music Rest	譜面台	GX-1, CS-60
	30:12:80:00 04:54:60	Stopper for Music Rest	譜面止メ	
	30:10:00:BA 01:14:20	Accessory for Music Rest	譜面板飾り面棒	
2	30:12:80:00 04:19:00	Control Panel	コントロールパネル	
	30:10:00:AA 04:14:10	Angle for Control Panel	アングル	
3	30:12:80:00 04:51:00	Side Board (Left)	パネル側板(左)	
4	30:12:80:00 04:51:10	- do. - (Right)	" (右)	
5	30:10:00:CB 02:91:60	Lid for Memory Bank	メモリーバンク蓋	
	30:10:00:NK 00:31:30	Memory Panel	メモリーパネル	
6	30:12:80:00 04:55:30	End Block (Right)	柏子木(右)	BS, N. European, European
	30:12:80:NK 00:31:10	- do. - (- do. -)	" ("	Others
7	30:12:80:00 04:55:10	- do. - (Left)	" (左)	
8	30:10:00:NB 04:56:50	Leg Assembly (Left)	脚柱(左)	
9	30:10:00:NB 04:79:30	- do. - (Right)	" (右)	
10	30:10:00:AA 03:76:00	Stay for Leg (Left)	支柱(左)	
11	30:10:00:AA 03:75:90	- do. - (Right)	" (右)	
	30:10:00:AA 04:13:00	Cap for Leg	脚用キャップ	
	30:10:00:AA 01:39:90	Adjusting Screw	脚調整ネジ	CS-60, YC-20
	40:10:00:CB 01:14:00	Knob Bolt for Stay Stopper M8 x 25	ノブボルト	CS-60, YC-20, 30
	40:10:00:CB 01:03:50	Knob Bolt for Leg Stopper M6 x 20	"	- do. -
	30:10:00:AA 03:76:40	Stay	支柱本体	

5. Volume Pedal (ボリュームペダル)

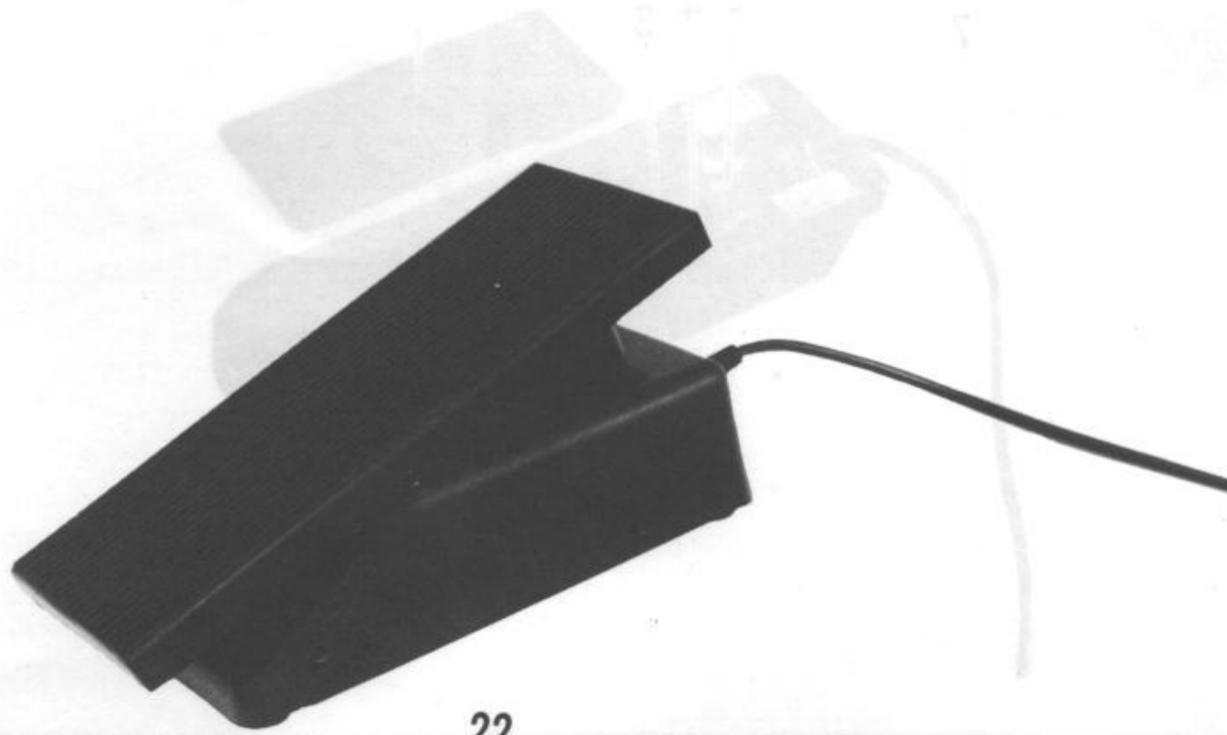

22

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
1	30 10 00 CB 80 87 40	Pedal Box		
2	30 10 00 CB 80 87 60	Bottom Plate		
3	30 10 00 NB 83 71 40	Taper Switch		
4	30 10 00 CB 80 83 80	Cover		
5	30 10 00 CA 80 84 80	Fluor Water		

Ref. No.	Part No.	Description (部品名)	Remarks	Common Model
22	30 12 00 NB 04 53 60	EXP Pedal	E X P ペダル	CS-50, CS-60
	30 10 00 CB 01 02 60	Case	ケース	-do.-
	30 10 00 AA 01 37 70	Flame	フレーム	-do.-
	30 10 00 DB 03 00 40	Rubber for Stopper	すべり止ゴム	-do.-
	30 10 00 AA 01 38 00	Pedal	踏板	-do.-
	30 10 00 CB 00 36 80	Rubber Pedal mat	マット	-do.-
	40 10 00 EV 10 00 40	Hexagonal nut 4s	接点カバー	CS-50, CS-60
	40 10 00 EV 10 00 60	- do. - 6s	"	-do.-
	30 10 00 AA 01 08 10	Shatler Plate	シャッター板	CS-50, CS-60
	40 10 00 CG 00 00 10	Frosted Glass	スリガラス	-do.-
	40 10 00 iK 00 00 30	Photocell, Cds	C d s	CS-50, CS-60
	30 10 00 CB 00 76 30	Photocell holder	Cdsホルダー	-do.-
	40 10 00 JB 00 01 70	Lamp, 24V5W	ランプ	CS-50, CS-60
	30 10 00 CB 00 76 40	Lamp holder	ランプホルダー	-do.-
	30 10 00 CB 00 76 20	Cover for Lamp	ランプカバー	-do.-
	40 10 00 LB 20 01 20	Lam socket	ブラケット	CS-50, CS-60

